

SoundOff Signal

3900 Central Parkway
Hudsonville, MI 49426
toll free 800.338.7337
office 616.896.7100
techsupport@soundoffsignal.com
www.soundoffsignal.com

WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.

WARNING: Warning devices are strictly regulated by Government ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

INSTALLATION

Windshield should be clean and free of grease or oil. The placement of the warning light should not restrict driver visibility and the unit should be placed so that air bag deployment will not be restricted. The best place for the unit is immediately behind the rear-view mirror.

1. Press suction cups into the side yokes of the light as shown in the illustration.
2. Lightly moisten suction cups and press unit firmly in place by pressing the domed shape on the back of each suction cup.

OPERATION AND ADJUSTMENT

The warning light is designed to accommodate various windshield angles. To align the light:

1. Slightly loosen, but DO NOT REMOVE, pivot screws on each side of unit.
2. Slide light up until all four bumpers are in contact with windshield.
3. Pivot light so that unit will project a horizontal pattern.
3. Retighten pivot screws. **CAUTION! DO NOT OVERTIGHTEN SCREWS AS UNIT CAN BE DAMAGED.**
4. Plug light into vehicle's cigarette lighter receptacle, press the red button on rear of unit to activate light. Press and HOLD to turn unit off.

Install suction cups by inserting base of cup through wide hole in bracket and pulling toward small hole.

Slightly loosen screw to adjust unit but DO NOT REMOVE.

Dual Pilot Warning Light
EPLTDWS+(x) (16 Patterns)

PATTERN SELECTION

1. Plug cord into vehicle's receptacle.
2. To activate the Emergency Warning Light push the red button on the left rear of the unit.
3. To deactivate the light push and HOLD the red button until unit turns off.
4. The Emergency Warning Light can generate 16 different light patterns. To change light patterns, momentarily push the red button while the unit is operating. Each push of the red button will advance the light to the next pattern. When desired pattern is reached that pattern will be stored in the unit's memory and will automatically come up every time the unit is turned on. After pattern #16 is reached the list will start over again at pattern #1.

SINGLE PILOT

FLASH PATTERNS for EPLTSWS+(x) PORTABLE WARNING LIGHT		
1	Quint Flash	Both lights alternating
2	Warp Flash	" " "
3	Inter-Cycle Flash	" " "
4	Double Flash	" " "
5	Quad Flash	" " "
6	3 Flashes / Second	" " "
7	3 Flashes / Second	Both lights operating simultaneously
8	Q-Switch Pattern	Both lights alternating
9	Driver Side Steady Burn	Passenger side Double Flash
10	Driver Side Steady Burn	Passenger side Quad Flash
11	Driver Side Steady Burn	Passenger side Quint Flash
12	Driver Side Steady Burn	Passenger side Warp Flash
13	E-Pattern Single Flash	Both lights alternating
14	E-Pattern Double Flash	" " "
15	E-Pattern Single Flash	Both lights operating simultaneously
16	E-Pattern Double Flash	" " "

DUAL PILOT

FLASH PATTERNS for EPLTDWS+(x) PORTABLE WARNING LIGHT		
1	X-Warp	X-Flashing pattern (Warp)
2	X-Double	X-Flashing pattern (Double)
3	V-Quint	Both lights alternating vert. (Quint)
4	V-Double	Both lights alternating vert. (Double)
5	V-3fps	Both lights alternating vert. (PP)
6	Q-Switch Pattern	Multiple Flash Pattern (Q-Switch)
7	1.9fps	Both lights alternating horiz. (RR)
8	Quad Flash	Both lights alternating horiz. (Quad)
9	Inter-Cycle Flash	Variable flash pattern (Alt. Horiz.)
10	V-Inter Cycle Flash	Variable flash pattern (Alt. Vert.)
11	Driver Side Steady Burn	Passenger side Warp
12	Driver Side Steady Burn	Passenger side Quad
13	E-Pattern Single Flash	Both Its alternating horiz. (E-Single)
14	E-Pattern Double Flash	Both Its alternating horiz. (E-Double)
15	E-Pattern Single Flash	Both Its alternating simul. (E-Single)
16	E-Pattern Double Flash	Both Its alternating simul. (E-Double)

SINGLE AND DUAL WINDSHIELD PILOT WARNING LIGHT

EPLTDWS+(x) / EPLTSWS+(x)



Single Pilot Warning Light
EPLTSWS+(x) (16 Patterns)



Press and Hold to turn ON or OFF. Press to advance pattern.

WARRANTY

SoundOff Signal warrants the EPLTxWS+(x) Warning Light for two (2) years from the date of purchase to the original purchaser against any manufactured defects or workmanship. This warranty is a 100% replacement value warranty. It applies only to units installed according to manufacturer's installation instructions and operated within the units specifications. Warranty is void if the unit was installed incorrectly or maliciously damaged. All warranty claims must be accompanied by a dated proof of purchase.

SoundOff Signal retains the right to be the sole mediator of what constitutes defects in performance or manufacturing.